





Crossfire XR Torch firing Cable

Crossfire/Pro Torch firing Cable

1. Locate Crossfire XR torch firing cable inside Computer Controller & ATHC components box and disconnect old cable from Crossfire/Pro

2. Remove barrel connector from old Crossfire Pro cable and T-tap connectors from the new torch fire cable included with the Crossfire XR kit



Remove appropriate ends from each cable



3. Solder the ends together and insulate with heat shrink or electrical tape. POLARITY DOES NOT MATTER, ONLY CONTINUITY! ENDS CAN BE WIRED INDISCRIMINATELY